



Getting Started Tips & Tricks

- The IP addresses on UPLINK1 and DEV1 can't be in the same subnet.
- The IP address on DEV1 should be in the same subnet as your equipment.
- For advanced 3G/4G configuration, navigate to the System -> UPLINK2 in the SiteManager GUI.
- If there is no agent available for your equipment, see the "Sniffer agent" guide on our support site.
- Make sure you have administrator rights in order to install run LinkManager

For more details refer to the Initial setup leaflet enclosed with the SiteManager.

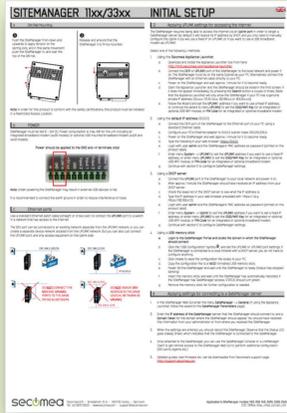

Example Scenario

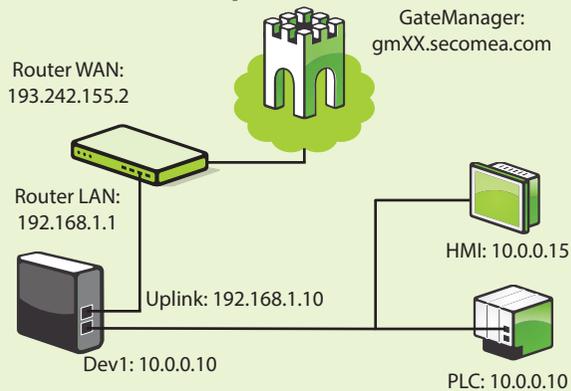

Easy Setup!

For further information regarding our products, visit our website:

<http://secomea.com>

See our getting started videos

and detailed documentation:

<http://support.secomea.com/start>

For documentation, videos and support, visit our support site:

<http://support.secomea.com>

Check out our Secomea **PREMIUM** account

- Differentiate user access
- Organise equipment in domains
- Actions and Alerts
- Access audit logs

Find more information here:

<http://info.secomea.com/premium>



Contact Details

Secomea A/S

Smedeholm 12-14
DK-2730 Herlev
Danmark
Phone: +45 88 70 86 50
Fax: +45 96 96 8650
E-Mail: info@secomea.com
Sales enquiry: Sales@secomea.com
Support enquiry: support@secomea.com

Security Certified

Getting Started



Industry 4.0 Certified

Follow the simple steps →

1 SiteManager Configuration



The SiteManager has the following default network settings

- UPLINK1: DHCP (Internet/WAN)
- DEV1: 10.0.0.1 (Machine network)



A. Install the Appliance Launcher on your PC
Download from:
<http://info.secomea.com/appliance-launcher>

B. Unbox the SiteManager

C. Connect the UPLINK1 or DEV1 port directly to your PC, and power on the SiteManager. (12-24 Volt DC) When the STATUS LED is steady red, start the Appliance Launcher software.

Select your SiteManager and click "Next". Follow the on-screen instructions. Refer to the START PACKAGE email you were provided

Appliance Launcher v5.8 (Build 14474)

MAC Address (1 device)	Product	Device Name
00:0C:A2:00:81:9E	SiteManager 1039	SiteManager

Selected: 00:0C:A2:00:81:9E

GateManager Parameters

GateManager Server: 193.242.155.112
GateManager Token: customer.JesperTestor

For SiteManagers with 3G/4G modem. Insert your SIM card and reboot the SiteManager.



Most cellular subscriptions will work without any configuration

After the SiteManager is configured, make sure it has internet connection and the status LED is steady green.

2 GateManager Login



A. Save the certificate attached to the email on your PC. Open a browser and go to the GateManager address from the email. click browse to select the certificate, and use the password associated with the certificate

Your Secomea START PACKAGE is do-not-reply@secomea.com

Attachments: Jesper-GM.gmc (3 KB)

This mail contains a new X.509 certificate for the Secomea GateManager administrator login. Save the attached file, Jesper-GM.gmc, in your Windows "My Documents" folder. The password associated with the GateManager certificate is: e_fr23fiE5

Follow this link to the GateManager administrator login screen: <https://gm02.secomea.com/admin> alternatively: <https://193.242.155.112/admin>

It is recommended to bookmark this page in your browser. The login screen will

GateManager Administrator Login

Certificate: Browse... No file selected.
 Remember Certificate

User name: _____
Password: _____

Login

B. Once logged into the GateManager, follow the startup wizard, to create a LinkManager user.

Startup Wizard

Welcome Jesper Svendsen.

You are now logged into the GateManager Portal, which is a powerful tool to centrally create and control user access and administer SiteManagers and remote accessible devices.

This Wizard will assist your first time setup of accounts and optionally SiteManager Embedded (SM-E).

Cancel Next

Run startup wizard again on next login? (You can always re-enable it under My Account)

You will receive an email with the LinkManager certificate. The password is the same as for the GateManager certificate

The GateManager is where you manage LinkManager users and SiteManagers.

3 LinkManager & Agents



A. From the GateManager, click the SiteManager GUI button to open the web interface of the SiteManager. Navigate to GateManager -> Agents and create an agent suitable for your equipment.

GateManager Agents

Status	Disable	S/N	Device Name	Device Type	Device IP & Parameters	Comment
STARTING	+00	07_PUC	GENERIC	All ports, 2-way NAT	10.0.0.10	

B. Install the LinkManager on your PC.
Download from:
<http://support.secomea.com/download-linkmanager>

C. Start the LinkManager. It will launch in your browser once ready. Login with the LinkManager certificate and password you have received by email.

Connect to the agent of the SiteManager.

LinkManager Login

Certificate: 00_Jesper-LM
Password: _____
 Remember password
 Open last domain: ROOT.JesperGmc
 Connect last device: (none)

Internet Connection: Auto-detect Add proxy

Login Certificates Shutdown About Advanced

Your domain is presented on the left side. The SiteManager and agents are on the right side

Once you have connected to an agent with your LinkManager, start using your programming software.